

jura®



D4 – Quick Reference Guide

D4 – Quick Reference Guide




These short instructions do not replace the 'D4 Instructions for Use'. Make sure you read and observe the safety information and warnings first in order to avoid hazards.

Inserting/changing the filter

Your D4 no longer has to be descaled if you are using the CLARIS Smart filter cartridge.

 
- i** Once the filter cartridge stops working (depending on the water hardness setting), the D4 will prompt you to change the filter.
- i** CLARIS Smart filter cartridges are available from specialised dealers.

Precondition: Your D4 is ready for use. The Filter symbol  lights up (if you are already using a filter).

- ▶ Open the water tank cover.
- ▶ Remove and empty the water tank.
- ▶ Open the filter holder and remove the **old** CLARIS Smart filter cartridge.
- ▶ Insert a **new** CLARIS filter cartridge Smart into the water tank, exerting slight pressure.
- ▶ Close the filter holder. It will click into place audibly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.

The machine has automatically detected that you have just inserted/changed the filter cartridge.

The light segment on the switch lights up.

- ▶ Place a receptacle under the hot-water nozzle.
- ▶ Turn the switch to the  position.


The light segment on the switch flashes, water flows out of the hot-water nozzle.

- i** You can interrupt rinsing of the filter at any time. To do this, turn the switch clockwise. Turn the switch anticlockwise to continue rinsing the filter.



- i** The water may be slightly discoloured. This is not harmful to health and does not affect the taste.

Rinsing of the filter stops automatically. The light segment on the switch lights up.

- ▶ Turn the switch to the  position.
- Your D4 is once more ready for use.

Cleaning the machine


After 180 preparations or 80 switch-on rinses, the D4 will prompt you to clean it.

 

 
 
 
 
CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces could be left behind in the water.

 
- ▶ Use only original JURA maintenance products.


 

- i** The cleaning programme lasts approximately 20 minutes.
- i** Do not interrupt the cleaning programme. The quality of cleaning will be impaired if you do so.
- i** JURA cleaning tablets are available from specialised dealers.

Precondition: The Cleaning symbol  lights up.

- ▶ Touch the Cleaning symbol  for **approximately 2 seconds**.
The Coffee Grounds Container symbol  lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The  symbol lights up.
- ▶ Place a receptacle under the coffee spout.
- ▶ Touch the Cleaning symbol  for **approximately 2 seconds**.
The  symbol flashes, water flows out of the coffee spout.
The operation is interrupted, the  symbol lights up.
- ▶ Open the cover of the filler funnel for ground coffee.



- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.
The  symbol lights up.

- ▶ Touch the Cleaning symbol  for **approximately 2 seconds**. The  symbol flashes, water flows out of the coffee spout several times. The operation stops automatically. The Coffee Grounds Container symbol  lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine. Your D4 is once more ready for use.

Descaling the machine

The D4 builds up deposits of limescale over time and automatically prompts you to descale it when necessary. The degree of calcification depends on the hardness of your water.

- i** If you are using a CLARIS Smart filter cartridge, you will not be prompted to descale.

⚠ CAUTION If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
- ▶ Rinse off the descaling agent with clean water. Should you get any descaling agent in your eye, see a doctor.

CAUTION If the wrong descaling agent is used, the machine could be damaged and/or traces could be left behind in the water.

- ▶ Use only original JURA maintenance products.

CAUTION If the descaling operation is interrupted, there may be damage to the machine.

- ▶ Allow the descaling programme to run to the end.



CAUTION If the descaling agent comes into contact with sensitive surfaces (e.g. marble), damage cannot be ruled out.


- ▶ Clean up any splashes immediately.

i The descaling programme lasts approximately 45 minutes.

i JURA descaling tablets are available from specialised dealers.

Precondition: The Descaling symbol  lights up.


- ▶ Touch the Descaling symbol  for **approximately 2 seconds**. The Coffee Grounds Container symbol  lights up.

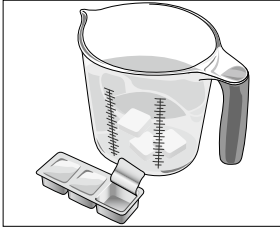

- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The ☰ and ☱ symbols light up.
- ▶ Remove and empty the water tank.
- ▶ Completely dissolve 3 JURA descaling tablets in a receptacle holding 500 ml of water. This may take several minutes.
- ▶ Pour the solution into the **empty** water tank and insert it into the machine.
The light segment on the switch lights up.

- ▶ Place a receptacle under the coffee spout and the hot-water nozzle.
- ▶ Turn the switch to the ☱ position.
The light segment on the switch flashes and water flows out of the hot-water nozzle several times. The Descaling symbol ☰ flashes during the descaling operation.
The operation is interrupted, the light segment on the switch lights up.
- ▶ Turn the switch to the ① position.
The descaling operation is continued.
The operation is interrupted, the Coffee Grounds Container symbol ☱ lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
The ☰ and ☱ symbols light up.
- ▶ Empty the receptacle and place it under the coffee spout and hot-water nozzle.
- ▶ Remove the water tank and rinse it thoroughly.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.
The light segment on the switch lights up.
- ▶ Turn the switch to the ☱ position.
The light segment on the switch flashes and water flows out of the hot-water nozzle several times.
The operation is interrupted, the light segment on the switch lights up.


D4 – Quick Reference Guide

- ▶ Turn the switch to the **I** position.
The descaling operation is continued.
The operation is interrupted, the Coffee Grounds Container symbol  lights up.
- ▶ Empty the drip tray and coffee grounds container and put them back into the machine.
Your D4 is once more ready for use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Cleaning the bean container

Coffee beans may be covered with a slight oil film which remains on the walls of the bean container. These traces may negatively affect the coffee result. For this reason clean the bean container from time to time.

- ▶ Press the On/Off button  to switch the D4 off.
- ▶ Open the bean container cover and remove the aroma preservation cover.
- ▶ Clean the bean container with a soft, dry cloth.
- ▶ Fill the bean container with coffee beans and close the aroma preservation cover.
- ▶ Close the bean container cover.

Descaling the water tank

Limescale deposits may form in the water tank. To ensure correct function of the machine, descale the water tank from time to time.

- ▶ Remove the water tank.
- ▶ If you use a CLARIS Smart filter cartridge, remove this.
- ▶ Completely fill the water tank and dissolve 3 JURA descaling tablets in it.
- ▶ Leave the water tank with the descaling solution for several hours (e.g. overnight).
- ▶ Empty the water tank and rinse it thoroughly.
- ▶ If you use a CLARIS Smart filter cartridge, insert this again.
- ▶ Fill the water tank with fresh, cold water and reinsert the tank.